
Kodak alaris

Helpful Tips to Keep Equipment Clean



The Kodak Alaris Environmental Health & Safety (EH&S) and the Services Team have provided a few recommendations that can be used as general guidance to ensure proper sanitation methods while servicing equipment. If you have any additional questions, please reach out to your Kodak Alaris Field Engineer for support or call (800) 356-3253.

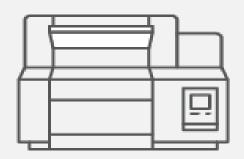

Clean and disinfect surfaces of the equipment before beginning work.

- Disconnect power to the equipment prior to cleaning surfaces.
- Wear gloves and observe cautions and instructions on labels or Safety Data Sheets for cleaning materials used.
- Touch screens may be damaged by abrasive or chemically aggressive cleaners and disinfectants. Manufacturers have recommended cleaning/disinfecting with a soft lint-free cloth dampened with a water/alcohol solution containing 50%-75% isopropyl alcohol (IPA). Do not spray solution directly on the screen. The screen should be wiped gently from top to bottom leaving a trace of solution on the screen. Avoid drips and forcing solution into screen edges (where it could loosen adhesive). Wait for the screen to dry before restoring power.
- Other equipment surfaces may be cleaned with non-abrasive over-the-counter cleaners (soap/detergent). Frequently touched surfaces (e.g. handles, keyboards, mouse, etc.) should also be disinfected by wiping down with the alcohol solution or any other EPA-registered household disinfectant (spray solution on a clean cloth or use commercial wipe).
- Clean and disinfect tools, computers, phones, etc. used on site (following recommendations above).
- Dispose of gloves and wash hands when job is complete (use hand sanitizer if soap/water are not readily available).